

Classic PABX (CL - 208) Ver: 7.0 / 7.1
QUICK REFERENCE CARD

91	To Access 1 st External Telephone Line [CO 1].
92	To Access 2 nd External Telephone Line [CO 2].
0	To Access 1 st Available External Telephone [CO Line].
1	To PICKUP External (CO Line) Incoming from a Phone, which is not ringing.
7	To PICKUP Internal CALL from a Phone which is not ringing.
8	To Connect DOOR PHONE.
85	To Open Electric DOOR LOCK, Dial / 5 /right after dialing / 8 /for Door Phone.
6 <i>Camp-on</i>	When called Extension / Trunk Line is busy Dial / 6 /and Hangup Phone.
3 <i>Call Disconnect</i>	When Called Extension is busy Dial / 3 /to Disconnect the Trunk Call.
4 <i>Executive Break-in</i>	When Called Extension is Busy Dial / 4 /to connect with communicating Ext While TK go on Hold.
5 <i>Executive Override</i>	When called Extension is busy Dial / 5 /to connect with communicating.
* 1EE <i>Call Diversion</i>	To Divert / Forward Calls to other Extension, Dial / *1EE /, and Hangup Phone
<i>Call Hold</i>	To HOLD External Telephone CALL (Both Incoming and Outgoing) Press FLASH Button or Push HOOK SWITCH.
<i>Call Transfer</i>	First HOLD the Call from FLASH button or HOOK switch then dial the desired Number i.e 21,22,23.... etc.
<i>Rapid Transfer</i>	HOLD the external Call, dial Extension Number and Hang UP The Handset.
<i>Call Retrieve</i>	PRESS FLASH button twice to Connect back CO Line.
<i>Call Disconnect</i>	PRESS HOOK switch for 2 Seconds or Hangup the Handset.
<i>Extensin To Extension Call</i>	Dial desired Extension Number 21, 22, 23...
<i>Conference</i>	Hold the External Call, dial the desired Extension, Press again the Flash button or HOOK switch to Reconnect CO line with both Extension.
<i>Door Phone Bell Ringing</i>	Pressing Push button located at DOOR PHONE, Ext. 21 (default) Starts ringing Pick the Handset to connect.

Classic PABX (CL - 208) Ver. 7.0 / 7.1
TELEPHONE EXCHANGE & INTERCOM SYSTEM

USERS-FRIENDLY FEATURES

<p><i>New</i></p> <p>1. Call Duration Limit. Set time limit (1 to 4 minutes) of out station or mobile calls.</p> <p><i>New</i></p> <p>2. Executive Break-in. Dial '4' to get connected with busy extension.</p> <p><i>New</i></p> <p>3. Camp-on Extension. In Case of busy Extension Dial '6' and Hangup phone.</p> <p><i>New</i></p> <p>4. Call Diversion. If any subscriber required to transfer its Ext. calls to other Ext, Dial *1EE and hangup phone.</p> <p><i>New</i></p> <p>5. Camp-on Trunk. If TK access is allowed to an Ext. and it gets busy status, then Dial '6' and hangup phone.</p> <p><i>New</i></p> <p>6. Executive Override. When called Extension is busy Dial '5' to connect with communicating Ext.</p> <p><i>New</i></p> <p>7. Call Disconnect. Two Extension i.e Executive and Special have the facility to disconnect any Ext. from Trunk line.</p> <p>8. Complete Privacy. No Third party can hear the conversation of any two parts.</p> <p>9. Trunk Hold. The external line can be put on hold and retrieved.</p> <p>10. Trunk Access. Co-line can access selectively or any free available.</p>	<p>11. Trunk Transfer. The external line can be transferred to any extension.</p> <p>12. Caller ID. CLI will appear at any Ringing Extension that is defined.</p> <p>13. Mobile/ISD/STD Call Block. Allow / Disallow Dial '0' for outgoing calls.</p> <p>14. Simultaneous Ring. Incoming call ring on several extensions simultaneously.</p> <p>15. Music Self Check. Self check Music-on-hold any time.</p> <p>16. Operator Buzzer. Distinctive Indication of incoming call to operator</p> <p>17. Internal Communication. All Extension can communicate with each another.</p> <p>18. Trunk Blocking. External lines access can be blocked for any extension.</p> <p>19. Pulse/ Tone dialing. The exchange can work with pulse as well as tone telephone sets.</p> <p>20. Music on hold. A melody is sent on the external line when on hold.</p>
---	--

Classic PABX (CL - 208) Ver. 7.0 / 7.1
TELEPHONE EXCHANGE & INTERCOM SYSTEM

USERS-FRIENDLY FEATURES

21. Door phone.

A Classic door phone can be connected to operate through the system.

22. Door lock.

An electric door lock can be connected to operate through the system.

23. Trunk diversion on power failure.

The external lines are connected directly to the extension on power failure.

24. Key-phone operation.

All Extension can act as master set.

25. User programmable.

Programming can be done through Extension '11'

26. External Music.

There is a provision to connect an external music source.

27. Door bell ringing.

Press PUSH button programmed Ext start ringing.

28. Programming Beep.

During programming you will hear valid and invalid Day/Night service.

29. Night service Mode.

Programmable Day/Night service.

30. Extenal / internal call pick-up.

Any extension can intercept an incoming external/internal call.

31. Distinct ringing.

Different ring patterns for external and internal calls allow identification.

32. Trunk Ring beep.

If Trunk ring assign next is busy Ext, here trunk ringing beep.

33. Conference.

One external and two internal lines can communicate simultaneously.

Classic PABX (CL - 208) Ver: 7.0 / 7.1
INDEX OF SYSTEM PROGRAMMING

<i>No</i>	<i>Command</i>	<i>Description</i>
1	* 91 abcd	Un locking system for programming (abcd=1234)
2	*92 abcd	Changing password
3	# 700	Reset to default setting
4	# 71 T EE EE	Trunk access Enable
5	# 72 T EE EE	Trunk access Disable
6	# 73 T EE EE	Trunk Ring Sequence (Day)
7	# 74 EE	Special Ext. Enable (Only one Ext.)
8	# 74 00	Special Ext. Disable
9	# 75 EE EE... ..	Door Bell Simultaneous Ring Enable
10	# 75 00	Door Bell Ring Disable
11	# 76 T EE EE... ..	Trunk Ring Sequence (Night)
12	* 771 (without password)	Trunk Ring Sequence Switch to Day Mode
13	*770 (without password)	Trunk Ring Sequence Switch to Night Mode
14	# 78 EE	Executive Extension Enable
15	# 78 00	Executive Extension Disable
16	# 79 EE EE	Trunk Simultaneous Ring Enable
17	# 79 00	Trunk Simultaneous Ring Disable
18	# 81 EE EE... ..	Mobile Call Permission Enable ('0') access enable
19	# 82 EE EE... ..	Mobile Call Permission Disable ('0') access disable
20	# 85 1	Operator Buzzer Enable
21	# 85 0	Operator Buzzer Disable
22	* 86(without password)	Music self Check
23	#87 EE EE... ..	Call Time Limit Enable
24	# 88 EE EE... ..	Call Time Limit Disable
25	# 89 N	Set Time Limit (1 to 4 minutes)

Where *T*: trunk line number Such as 1 or 2

EE: extension number Such as 21,22,23

Abcd: (0000 to 9999)

Note : ● Default Password=1234

- After unlocking the programming mode continuously enter desired programming codes without Disconnecting (on hook) telephone
- Executive Extension Facilities : Break-in, Call Disconnect, Ext. Override
- Special Extension Facilities : Call Disconnect

Classic PABX(CL - 208) Ver. 7.1
DISPLAY PROGRAMMED
OPTION

Stored Programming can be Display on LED Status from Ext. 21.
No password required for display.

<i>NO</i>	<i>COMMAND</i>	<i>DESCRIPTION</i>
<i>1</i>	<i>* 71 T *</i>	<i>Trunk access Enable Ext. Display on LED Status</i>
<i>2</i>	<i>* 73 T *</i>	<i>Trunk Ring Sequence Display on LED Status(Day Mode)</i>
<i>3</i>	<i>* 74 *</i>	<i>Special Extension Enable Display on LED Status</i>
<i>4</i>	<i>* 75 *</i>	<i>Door Bell Ring Ext. Display on LED Status</i>
<i>5</i>	<i>* 76 T *</i>	<i>Trunk Ring Sequence Display on LED Status(Night Mode)</i>
<i>6</i>	<i>* 78 *</i>	<i>Executive Extension Display on LED Status</i>
<i>7</i>	<i>* 79 *</i>	<i>Simultaneous Ring Enable Display on LED Status</i>
<i>8</i>	<i>* 81 *</i>	<i>Mobile Call Permission Enable Display on LED Status</i>
<i>9</i>	<i>* 87 *</i>	<i>Call Time Limit Display on LED Status</i>
<i>10</i>	<i>**</i>	<i>System Configuration Display on LED Status</i>

Note:

Where T: Trunk line number such as 1,2,3,4