

Salah Times Clock for Home

SC-106AT



SC-206AT



User Manual

 


Index

- SET TIME _____	1
- SET HIJRI _____	1
- SET VAR _____	2
- SET CITY _____	3
- SET Adv. (Advance) _____	5
- VEIW Salah _____	8
- Remaining Time Indications _____	9

Remote Setting:

- Press **5** for minimum 3 Seconds to unlock the Clock.
- Press **Time** then "TIME SET" starts blinking. (page # 1)
- Press **5** for minimum 3 Seconds to unlock the Clock.
- Press **Hijri** then "HIJRI SET" starts blinking. (page # 2)
- Press **5** for minimum 3 Seconds to unlock the Clock.
- Press **City** then "CITY SET" starts blinking. (page # 4)
- Press **5** for minimum 3 Seconds to unlock the Clock.
- Press **Iqamah** then "Qari Name" starts blinking. (page # 7)

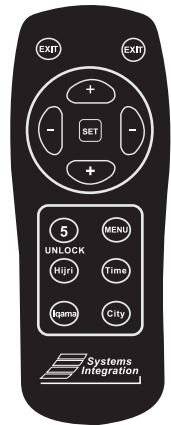

To Play "Tilawat", "Complete Quran" or Dua Quran:


- Press **Iqamah** button till 2 second, then Qari Name starts blinking.
- Use **+/-** to select Qari Name and then select a Surah to play.
- If you want to play Complete Quran then select "Al-Quran Kareem" and press **SET**.
Note: Complete Quran Recorded in voice of Qari Rashid Alafasy.
- Now Surah Name start blinking. Use **+/-** to select Surah and press **SET** to play.
- Use **+/-** to adjust volume.

User Manual

Panel have 6 Menu selections to set different parameters:

- | | | |
|-------------|--------------|---------------|
| 1. SET TIME | 2. SET HIJRI | 3. SET VAR |
| 4. SET CITY | 5. SET Adv | 6. VEIW Salah |

Note: First Unlock the Clock to go into any Menu option.

- For this press and hold Unlock button for minimum 3 seconds,
- when mark  appears, press **MENU** and **SET** to enter a desired option.

1.


- Press **SET** to enter Menu. Seconds start blinking.
- Press **+** to set the Seconds in "00".
- Press **SET** and **+**/**-** to set Time, Day, Date and Year parameters.

2.

 
To set Date, Month and Year into Hijri Set:

- Press **SET** to enter Menu. Hijri Date starts blinking.
- Use **+**/**-** to adjust current Date.
- Press **SET**, Hijri Month starts blinking.
- Use **+**/**-** to adjust current Month.
- Press **SET**, Hijri Year starts blinking.
- Use **+**/**-** to adjust current Year. Press **SET**, English Date starts blinking. If need to changes, then change it or exit.


3. SET VAR




Select Display Language:
Urdu & English,



 
Select Fiqah:
HF = Hanffi, SH = Shaffi &
H1 = Zoha Kobra (Hanaffi).



 Sunrise to Ishraq Duration:
Set on 0 to 25 minutes.



Zawal Duration:
Set at 0 to 20 minutes.



To get suitable Zawal duration set
few minutes before and after Zawal.

Before Zawal: Set (-ZL) 0 to 10 minutes.

After Zawal: Set (+ZL) 0 to 10 minutes.



Speaker Volume: To Set ON/OFF Speaker Volume.



Day Light Saving:

ON: 1 hour added to current time and all slah times.

OFF: To disable DST.











To Set 24 or 12 Hours Format:

Set on Check to display 24 Hour mode for all timings.





Set on Cross to display 12 Hour mode for all timings

Factory Setting:

 If you need to reset all settings, then select  and press  then  starts Blinking. if you do not want to reset the Panel then press  to exit. Or use  to select  and then press  then Panel will revert to its previous setting.

Note: Auto Brightness adjustment on 11 PM to Fajr time.
(Option available in SC-106AT)

4.

- First, find the required City code from the given City code list.
- Press  to enter Menu. Select Code via  /  ,  to save.


New City Addition





- If your desired City is not available in the given City List, you may
- add it by setting City Latitude, Longitude and Time Zone. For this
- you have to set City Code 0000 in [City SET] menu option.

 - Press  to enter set mode. Select Code "0000".

 - Press  to enter Latitude, use  /  to set Latitude.

 - Press  to enter Longitude, use  /  to set it.

 - Press  to enter Time Zone, use  /  to set GMT.

 - Press  to enter Calculation Method, use  /  to set Method.

Calculation Method

- 00 Method : University of Islamic Science Karachi.
(Fajr Twilight = 18° , Isha Twilight = 18°)
- 01 Method : Islamic Society of North America.
(Fajr Twilight = 15° , Isha Twilight = 15°)
- 02 Method : Muslim World League.
(Fajr Twilight = 18° , Isha Twilight = 17°)
- 03 Method : Ummal Qura Comittee.
(Fajr Twilight = 18.5° , Isha Twilight = 90 min after sunset)
- 04 Method : Egyption General Authority.
(Fajr Twilight = 19.5° , Isha Twilight = 17.5°)
- 05 Method : It is used to set Fajr Twilight Angle and Isha Twilight by users choice.
First set Fajr Angle (F A) 10.0° to 24.0° and then
Isha Angle (I A) 10.0° to 24.0° .

FA = Fajr Angle **FA = 15.0°** IA = Isha Angle **IA = 18.0°**

5.

SET ADV.

Azan Setting

Goto **SET AZAN**, use **+**/**-** and **SET** to select Azan. Nine Azan are stored. Select to play different Azan for each Salah or Fix one Azan for All Salah.

To Set Volume

13 VOL Use **+**/**-** set volume 1 - 30. This volume will be used for all voices.

Press **SET**, **FAIR** starts blinking. Use **+**/**-** to select desired options, **FAIR** **OFF FAIR** or **FAIR**

Set Daily Tilawat

Note
Press CITY button during Tilawat to PAUSE/RESUME.

There are some Surah saved in Clock. One can select to play each Surah daily at any preset time or to play one Fix Surah daily to play.

Select **SET Tilawat**, **ON RECITE** starts blinking.

Press **SET** to enter set mode, Qari names **QARI NAME** starts blinking. Use **+**/**-** and **SET** to set Qari name, so that you can listen tilawat on your selected Qari voice.

ALL Surah / **FIX Surah** Starts blinking. Use **+**/**-** and **SET** to select.

FIX Surah To play only selected surah daily by using **+**/**-**, Surah Name will appear one by one for selection.

Press **SET** to select Surah.

Volume option **00 =Vol** starts blinking. Use **+**/**-** to set volume **01 =Vol** to **30 =Vol**

Press **SET** , use **+**/**-** and **SET** to set the timing to play Surah.

ALL Surah To play different Surah, will be play on desired Qari Voice.

Surah	Days	Voice		Duration Min
سورة الكهف	Friday	Abdul Rahman Al-Sudais	Complete	23:49
سورة البقرة	Saturday	Abdul Basit Abdul Samad	Ayat: 1 to 73	25:14
سورة سجده	Sunday	Abdurrahman Al Ausi	Complete	07:20
سورة يسين	Monday	Mishary Rashid Al Afasy	Complete	17:48
سورة الرحمن	Tuesday	Raad Muhammad Al Kurdi	Complete	12:02
سورة الواقعة	Wednesday	Saad Al Ghamdi	Complete	08:37
سورة الملك	Thursday	Abdul Rahman Al-Sudais	Complete	14:05

To Set Dua of After Azan

Select **SET DUA** , **ON A.ZAN** starts blinking.

✓ A.ZAN Set it ON mode, then Dua will be played after all Azan.

✗ A.ZAN

 
Set Manzil

Manzil Dua is a collection of Ayaat and short Surah taken from Quran. Option is available to play daily on a preset time.

ON Manzil ON: Set it ON mode and play at selectable time

Al Ruqyah Al Shariah

Al Ruqyah Al Shariah is a collection of Ayaat and short Surah taken from Quran. Option is available to play daily on a preset time.



ON: Set it ON mode and play at selectable time.

Tahajjud Alarm

Select **SET ALARM**, **ON T.ALM** starts blinking.

For Tahajjud Alarm, you need to set Offset time (10 – 90 Minutes) according to Fajr.

For example, If you set 30 Minutes Alarm then Alarm starts to play before 30 minutes of Sunrise.

To Set Tahajjud Alarm

ON T.ALM Set ON mode, then **10 T.ALM** starts blinking.

Use **+** / **-** to set Minutes, and press **SET** then

Alarm **01 =VOL** starts blinking.


 
Use **+** to set the volume and press **SET** then press **EXIT**.



Fajr Alarm

For Fajr Alarm, you need to set Offset time (10 – 90 Minutes) according to Sunrise.




For example, If you set 30 Minutes Alarm then Alarm starts to play before 30 minutes of Sunrise.

To Set Fajr Alarm

 Set ON mode, then  starts blinking.



Use  /  to set Minutes, and press  then

Alarm  starts blinking.

Use  to set the volume and press  then press .

6.

- Press  to enter in the Menu.

- Used  /  to see all the start timings of Salah.

Remaining Indication of Specific Times

Tahajjud ↓ 13

Tahajjud: The 30 minutes remaining countdown starts automatically before of Sunrise.

SEHRI ↓ 14

Sehri: In during Ramzan the Sehri countdown will start except Tahajjud.

Sunrise ↓ 4

Sunrise: The 10 minutes remaining countdown will start automatically.

ZAWAL ↓ 3

Zawal: The 10 minutes remaining countdown will start automatically.

Sunset ↓ 5

Maghrib: The 10 minutes remaining countdown will start automatically before Sunset.

IFTAR ↓ 10

Iftar: In during Ramzan the Iftar countdown will start automatically.

Sunset ↓ 9

Counter of 9 Minutes from to Maghrib Timing during Ramadan.

Prohibited

Indication Prohibited Time of Sunrise or Zawal.



Note: Zawal Light option available in SC-206AT

Salaat Clock Different Models

SC-106AT



SC-206AT



SC-4i



SC-Jumbo



Head Office:

Office # 412, 4th Floor, Madina City Mall, Abdullah Haroon Road, Saddar,
Karachi-74400, Pakistan.



Tel: +92(21)-35217256, 35654771-74 / Cell ☎️: +92-3360837535

Email: info@systemsintegration.com.pk

Url: www.systemsintegration.com.pk

Rawalpindi Service Center:

Office # 104, 1st Floor, Rawal Suaq Plaza,
Opposite Steps College, National Market, Chandni Chowk.
Whatsapp/Voice: 0306-9787064

Lahore:

Shop # 345-G, Panorama Centre, The Mall Road.
Tel: 042-36299705/06
Whatsapp/Voice: 0331-4282515

Multan:

Shop # 38, Multan Commercial Centre, Vehari Road.
Tel: 061-6242323
Whatsapp/Voice: 0334-1757159

Hyderabad:

Shop # 4, Tilak Chari, Op. Aftab Surgical.
Tel: 022-2631434
Whatsapp/Voice: 0331-8368608

www.systemsintegration.com.pk